


A8s
Receiving Card

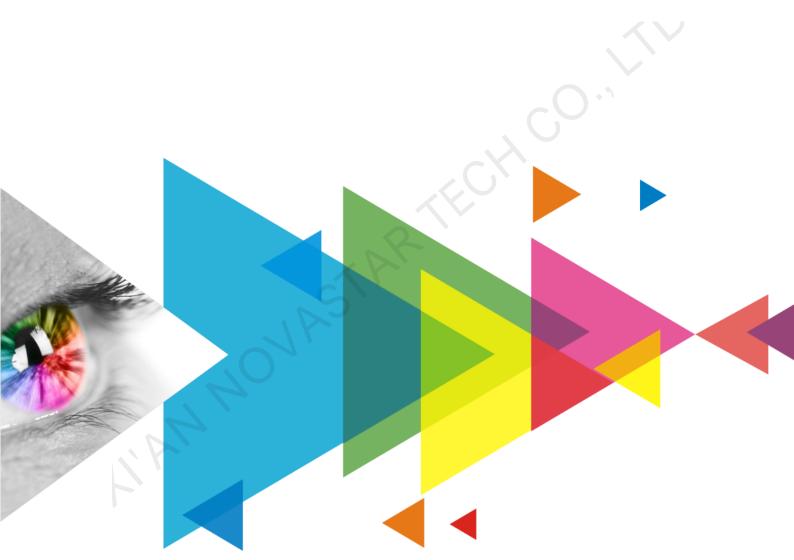

**Specifications** 

# **Change History**

Document Version	Release Date	Description
V2.2.3	2022-12-27	Updated the description of the maximum resolution.
		Updated the low latency description.
		Updated the dimensions diagram.
		Updated the packing box dimensions.
		Deleted the LVDS transmission.
V2.2.2	2022-08-31	Updated the input voltage.
V2.2.1	2022-03-26	Added the dimensions diagram description.
		Added the current and power consumption description.
		Updated the pins section.
V2.2.0	2021-11-25	Updated the certification related description.
		Updated the appearance diagram.
V2.1.7	2021-08-18	Updated the side-view dimensions diagram.
V2.1.6	2021-07-30	Updated the description of features.
V2.1.5	2021-07-15	Added the certification related description.
V2.1.4	2021-03-25	Updated the dimensions diagram.
V2.1.3	2021-02-06	Updated the appearance diagram.
		Updated the packing information.

### Introduction

The A8s is a high-end full-featured small receiving card developed by NovaStar. For PWM driver ICs, a single A8s supports resolutions up to 512×384@60Hz. For common driver ICs, a single A8s supports resolutions up to 384×384@60Hz.

Adopting the exclusive Image Booster technology of NovaStar, the A8s can precisely calibrate the color gamut and grayscale of the screen, and improve the grayscale by 64 times. It also supports the pixel level brightness and chroma calibration, individual gamma adjustment for RGB, low latency, 3D and HDR functions, significantly improving the brightness, grayscale and color performance from every aspect and offering users an ultimate visual experience with a uniform, smooth and lifelike image.

The A8s uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A8s has improved electromagnetic compatibility and is suitable for various on-site setups that have high requirements.

# **Certifications**

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

### **Features**

#### **Improvements to Display Effect**

- Image Booster (Effects depend on the driver IC)
  - Color Management: Allow users to freely switch the color gamut of the screen between different gamuts in real time to enable more precise colors on the screen.
  - Precise Grayscale: Individually correct the 65,536 levels of grayscale (16bit) of the driver IC to fix the display problems at low grayscale conditions, such as brightness spikes, brightness dips, color cast and mottling. This function can also better assist other display technologies, such as 22bit+ and individual gamma adjustment for RGB, allowing for a smoother and uniform image.
  - 22bit+: Improve the LED display grayscale by 64 times to avoid grayscale loss due to low brightness and allow for more details in dark areas and a smoother image.

NovaLCT V5.4.0 or later is required.

- Pixel level brightness and chroma calibration
  Work with NovaStar's high-precision calibration
  system to calibrate the brightness and chroma of
  each pixel, effectively removing brightness
  differences and chroma differences, and
  enabling high brightness consistency and
  chroma consistency.
- Quick adjustment of dark or bright lines
   The dark or bright lines caused by splicing of
   cabinets or modules can be adjusted to improve
   the visual experience. This function is easy to
   use and the adjustment takes effect immediately.

#### Low latency

For PWM driver ICs, the latency of video source on the receiving card end can be reduced to 1 frame. For DCLK continuous PWM driver ICs, to use low latency, the customized firmware is required.

#### • 3D function

Working with the sending card that supports 3D function, the receiving card supports 3D image output.

- Individual gamma adjustment for RGB
  Working with NovaLCT (V5.2.0 or later) and the
  sending card that supports this function, the
  receiving card supports individual adjustment of
  red gamma, green gamma and blue gamma,
  which can effectively control image nonuniformity at low grayscale conditions and white
  balance offset, allowing for a more realistic
  image.
- Image rotation in 90° increments
   The display image can be set to rotate in multiples of 90° (0°/ 90°/180°/270°).
- Image rotation at any angle
   Working with SmartLCT and the MCTRL R5 LED
   display controller, the receiving card supports
   image rotation at any angle.

#### HDR

HDR10 and HLG are supported.

Work with the sending card that supports the HDR function to correctly parse the HDR video source and faithfully reproduce the original brightness range and color space, allowing for a more lifelike image.

### **Improvements to Maintainability**

- Smart module (dedicated firmware required)
   Working with the smart module, the receiving
   card supports module ID management, storage
   of calibration coefficients and module
   parameters, monitoring of module temperature,
   voltage and flat cable communication status,
   LED error detection, and recording of the
   module run time.
- Automatic module calibration
   After a new module with flash memory is installed to replace the old one, the calibration coefficients stored in the flash memory can be automatically uploaded to the receiving card when it is powered on.
- Quick uploading of calibration coefficients
   The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management
   For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash

For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.

- Mapping function
  - The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card
  The image displayed during startup, or displayed
  when the Ethernet cable is disconnected or
  there is no video signal can be customized.
- Temperature and voltage monitoring
   The temperature and voltage of the receiving
   card can be monitored without using peripherals.
- Cabinet LCD
   The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.

#### **Improvements to Reliability**

Dual card backup and status monitoring
In an application with requirements for high
reliability, two receiving cards can be mounted
onto a single hub board for backup. When the
primary receiving card fails, the backup card can
serve immediately to ensure uninterrupted
operation of the display.

The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

- Loop backup
  - The receiving cards and the sending card form a loop via the primary and backup line connections. When a fault occurs at a location of the lines, the screen can still display the image normally.
- Dual backup of configuration parameters
   The receiving card configuration parameters are stored in the application area and factory area of

- Bit error detection
  - The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.
  - NovaLCT V5.2.0 or later is required.
- Status detection of dual power supplies
   When two power supplies are used, their working status can be detected by the receiving card
- Firmware program readback
   The firmware program of the receiving card can be read back and saved to the local computer.

   NovaLCT V5.2.0 or later is required.
- Configuration parameter readback
   The configuration parameters of the receiving card can be read back and saved to the local computer.
  - the receiving card at the same time. Users usually use the configuration parameters in the application area. If necessary, users can restore the configuration parameters in the factory area to the application area.
- Dual program backup Two copies of firmware program are stored in the application area of the receiving card at the factory to avoid the problem that the receiving card may get stuck abnormally during program update.
- Dual backup of calibration coefficients
   The calibration coefficients are stored in the application area and factory area of the receiving card at the same time. Users usually use the calibration coefficients in the application area. If necessary, users can restore the calibration coefficients in the factory area to the application area.

# **Appearance**

### Top



Power Running indicator Indicator

#### **Bottom**



High-Density Connector


All product pictures shown in this document are for illustration purpose only. Actual product may vary.

# **Indicators**

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.
118		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

# **Dimensions**

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.6 mm. Ground connection (GND) is enabled for mounting holes.

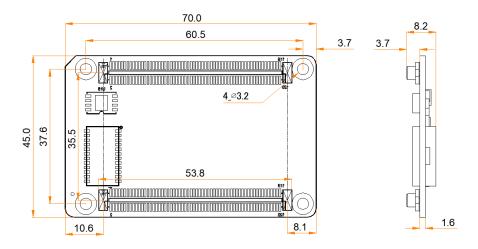

Tolerance: ±0.3 Unit: mm



The distance between outer surfaces of the A8s and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

### **Pins**

### 32 Groups of Parallel RGB Data



JH1							
	GND	1	2	GND			
LCD CS signal	EXT_CS#RW	3	4	NC			
LCD RS signal	EXT_LCD_CD/RS	5	6	NC			


		JH1			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC	
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC NC	
LCD backlight signal 1	EXT_LCD_BL0	<del>9</del> 11	12	NC NC	
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC NC	
LCD backlight signal 2	EXT_KEY	15	16	NC NC	
A reserved pin for MCU					
connection	EXT_MCU_ADC	17	18	NC	
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC	
	GND	21	22	NC	
	NC	23	24	NC	
	GND	25	26	GND	
1	G17	27	28	R17	1
/	R18	29	30	B17	1
/	B18	31	32	G18	71,
/	G19	33	34	R19	1
/	R20	35	36	B19	1
/	B20	37	38	G20	1
•	GND	39	40	GND	. 1
1	G21	41	42	R21	1
/	R22	43	44	B21	/
· · · · · · · · · · · · · · · · · · ·					
/	B22	45	46	G22	/
/	G23	47	48	R23	/
/	R24	49	50	B23	/
/	B24	51	52	G24	/
	GND	53	54	GND	
1	G25	55	56	R25	/
/	R26	57	58	B25	/
/	B26	59	60	G26	/
/	G27	61	62	R27	/
/	R28	63	64	B27	/
/	B28	65	66	G28	/
<u> </u>	GND	67	68	GND	·
/	G29	69	70	R29	/
/	R30	71	72	B29	/
1	B30	73	74	G30	/
1					/
	G31	75	76	R31	/
	R32	77	78	B31	/
	B32	79	80	G32	/
	GND	81	82	GND	
1	RFU4	83	84	RFU3	/
/	RFU6	85	86	RFU5	/
1	RFU8	87	88	RFU7	/
	RFU10	89	90	RFU9	/
	RFU12	91	92	RFU11	
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
/	RFU18	99	100	RFU17	/
·	NC NC	101	102	NC	,
	NC NC	103	102	NC NC	
	NC NC	105	106	NC NC	
	NC	107	108	NC	
	GND	109	110	GND	

JH1								
	GND	111	112	GND				
	NC	113	114	NC				
	EXT_5V	115	116	EXT_5V				
	EXT_5V	117	118	EXT_5V				
	EXT_5V	119	120	EXT_5V				

JH2								
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground			
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground			
Chassis greatia	NC NC	5	6	NC NC	Chaodio ground			
	NC	7	8	NC				
	Port1_T0+	9	10	Port2_T0+				
	Port1_T0-	11	12	Port2_T0-				
	NC	13	14	NC	/ \ /			
	Port1_T1+	15	16	Port2_T1+				
	Port1_T1-	17	18	Port2_T1-				
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port			
3	Port1_T2+	21	22	Port2_T2+				
	Port1_T2-	23	24	Port2_T2-				
	NC	25	26	NC NC				
	Port1_T3+	27	28	Port2_T3+				
	 Port1_T3-	29	30	Port2_T3-				
	NC	31	32	NC				
	NC	33	34	NC				
Toot hutton	TEST_INPUT_KEY		26		Running indicator			
Test button	TEST_INPUT_KET	35	36	STA_LED-	(active low)			
	GND	37	38	GND				
Line decoding signal	A	39	40	DCLK1	Shift clock output 1			
Line decoding signal	В	41	42	DCLK2	Shift clock output 2			
Line decoding signal	С	43	44	LAT	Latch signal output			
Line decoding signal	D	45	46	CTRL	Afterglow control signal			
Line decoding signal	E	47	48	OE_RED	Display enable signal			
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal			
	GND	51	52	GND				
1	<b>G</b> 1	53	54	R1	/			
1	R2	55	56	B1	1			
/	B2	57	58	G2	1			
1	G3	59	60	R3	/			
/	R4	61	62	B3	/			
1	B4	63	64	G4	1			
	GND	65	66	GND				
/	G5	67	68	R5	/			
/	R6	69	70	B5	1			
1	B6	71	72	G6	1			
1	G7	73	74	R7	1			
/	R8	75	76	B7	1			
/	B8	77	78	G8	/			
	GND	79	80	GND				
1	G9	81	82	R9	1			
/	R10	83	84	B9	1			
/	B10	85	86	G10	1			
/	G11	87	88	R11	1			
/	R12	89	90	B11	1			

JH2									
/	B12	91	92	G12	/				
	GND	93	94	GND					
/	G13	95	96	R13	/				
/	R14	97	98	B13	/				
/	B14	99	100	G14	/				
/	G15	101	102	R15	/				
/	R16	103	104	B15	/				
/	B16	105	106	G16	/				
	GND	107	108	GND					
	NC	109	110	NC					
	NC	111	112	NC					
	NC	113	114	NC					
	NC	115	116	NC					
	GND	117	118	GND	<b>731</b>				
	GND	119	120	GND					

### **64 Groups of Serial Data**

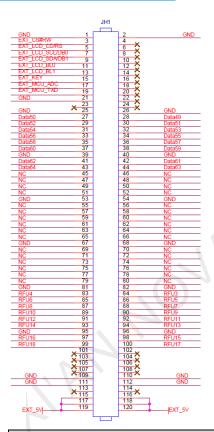



JH1							
	GND	1	2	GND			
LCD CS signal	EXT_CS#RW	3	4	NC			
LCD RS signal	EXT_LCD_CD/RS	5	6	NC			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC			
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC			
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC			
LCD control button	EXT_KEY	15	16	NC			
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC			
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC			

		JH1			
	GND	21	22	NC	
	NC	23	24	NC	
	GND	25	26	GND	
/	Data50	27	28	Data49	/
/	Data52	29	30	Data51	/
/	Data54	31	32	Data53	/
/	Data56	33	34	Data55	/
/	Data58	35	36	Data57	/
/	Data60	37	38	Data59	/
,	GND	39	40	GND	·
/	Data62	41	42	Data61	/
/	Data64	43	44	Data63	/
,	NC	45	46	NC	,
	NC NC	47	48	NC NC	
	NC NC	49	50	NC NC	
	NC NC	51	52	NC NC	
	GND	53	54	GND	
	NC NC	55	56	NC NC	<u> </u>
	NC NC			NC NC	<u>,                                    </u>
		57	58		
	NC NC	59	60	NC NC	
	NC NO	61	62	NC NC	
	NC NO	63	64	NC	
	NC	65	66	NC	
	GND	67	68	GND	
	NC NO	69	70	NC NC	
	NC NC	71	72	NC NC	
	NC	73	74	NC	
	NC	75	76	NC	
	NC	77	78	NC	
	NC	79	80	NC	
	GND	81	82	GND	
/	RFU4	83	84	RFU3	/
/	RFU6	85	86	RFU5	/
1	RFU8	87	88	RFU7	/
1	RFU10	89	90	RFU9	/
1	RFU12	91	92	RFU11	/
	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
1	RFU18	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	EXT_5V	115	116	EXT_5V	
	EXT_5V	117	118	EXT_5V	
	EXT_5V	119	120	EXT_5V	

JH2						
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground	

JH2							
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground		
Chaosio ground	NC	5	6	NC NC	Chaosio ground		
	NC	7	8	NC NC			
	Port1_T0+	9	10	Port2_T0+			
	Port1_T0-	11	12	Port2_T0-			
	NC			NC			
		13	14				
	Port1_T1+	15	16	Port2_T1+			
	Port1_T1-	17	18	Port2_T1-	<b>2</b> 1 11 <b>2</b> 1 1 1		
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port		
	Port1_T2+	21	22	Port2_T2+			
	Port1_T2-	23	24	Port2_T2-			
	NC	25	26	NC			
	Port1_T3+	27	28	Port2_T3+			
	Port1_T3-	29	30	Port2_T3-			
	NC	31	32	NC			
	NC	33	34	NC			
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)		
	GND	37	38	GND	) * '		
Line decoding signal	А	39	40	DCLK1	Shift clock output 1		
Line decoding signal	В	41	42	DCLK2	Shift clock output 2		
Line decoding signal	С	43	44	LAT	Latch signal output		
Line decoding signal	D	45	46	CTRL	Afterglow control signal		
Line decoding signal	E	47	48	OE_RED	Display enable signal		
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal		
2 ispiraly critative eights.	GND	51	52	GND	2.op.ay chaste eighar		
/	Data2	53	54	Data1	/		
/	Data4	55	56	Data3	, ,		
/	Data6	57	58	Data5	/		
1	Data8	59	60	Data7	1		
1	Data10	61	62	Data9	1		
/	Data12	63	64	Data11	1		
1	GND	65	66	GND	1		
					1		
	Data14	67	68	Data13	1		
	Data16	69	70	Data15	1		
1	Data18	71	72	Data17	/		
	Data20	73	74	Data19	1		
	Data22	75	76	Data21	/		
	Data24	77	78	Data23	/		
	GND	79	80	GND			
	Data26	81	82	Data25	/		
/	Data28	83	84	Data27	/		
/	Data30	85	86	Data29	1		
/	Data32	87	88	Data31	1		
/	Data34	89	90	Data33	/		
/	Data36	91	92	Data35	/		
	GND	93	94	GND			
1	Data38	95	96	Data37	1		
/	Data40	97	98	Data39	/		
/	Data42	99	100	Data41	/		
/	Data44	101	102	Data43	/		
/	Data46	103	104	Data45	/		
/	Data48	105	106	Data47	/		
-	GND	107	108	GND			
	UID		100	O.I.D			

www.novastar.tech

JH2								
	NC	109	110	NC				
	NC	111	112	NC				
	NC	113	114	NC				
	NC	115	116	NC				
	GND	117	118	GND				
	GND	119	120	GND				



The recommended power input is 5.0 V.

OE\_RED, OE\_GREEN and OE\_BLUE are display enable signals. When RGB are not controlled separately, use OE\_RED. When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65–Data128 are multiplexed into Data1–Data64.

### **Reference Design for Extended Functions**

Pins for Extended Functions					
Pin	Recommended	Recommended	Description		
	Smart Module Pin	Module Flash Pin			
RFU3	HUB_CODE0	HUB_CODE0	Flash control pin 1		
RFU4	HUB_SPI_CLK	HUB_SPI_CLK	Clock signal of serial pin		
RFU5	HUB_CODE1	HUB_CODE1	Flash control pin 2		
RFU6	HUB_SPI_CS	HUB_SPI_CS	CS signal of serial pin		
RFU7	HUB_CODE2	HUB_CODE2	Flash control pin 3		
RFU8	/	HUB_SPI_MOSI	Module Flash data storage input		
KFU6	HUB_UART_TX	1	Smart module TX signal		
RFU9	HUB_CODE3	HUB_CODE3	Flash control pin 4		
RFU10	/	HUB_SPI_MISO	Module Flash data storage output		
KFUIU	HUB_UART_RX	1	Smart module RX signal		
RFU11	HUB_H164_CSD	HUB_H164_CSD	74HC164 data signal		
RFU12	/		/		
RFU13	HUB_H164_CLK	HUB_H164_CLK	74HC164 clock signal		
RFU14	POWER_STA1	POWER_STA1	Dual power supply detection signal 1		
RFU15	MS_DATA	MS_DATA	Dual card backup connection signal		
RFU16	POWER_STA2	POWER_STA2	Dual power supply detection signal 2		
RFU17	MS_ID	MS_ID	Dual card backup identifier signal		
RFU18	HUB_CODE4	HUB_CODE4	Flash control pin 5		



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

# **Specifications**

Maximum Resolution	512×384@60Hz (PWM driver ICs) 384×384@60Hz (Common driver ICs)	
Electrical Parameters	Input voltage	DC 3.8 V to 5.5 V
	Rated current	0.6 A
	Rated power consumption	3.0 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing

www.novastar.tech

Storage Environment	Temperature	-25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.2 mm
	Net weight	17.3 g
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.
	Packing box dimensions	392.0 mm × 200.0 mm × 123.0 mm

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

#### Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech Technical support support@novastar.tech